


# TYPICAL METER INSTALLATION

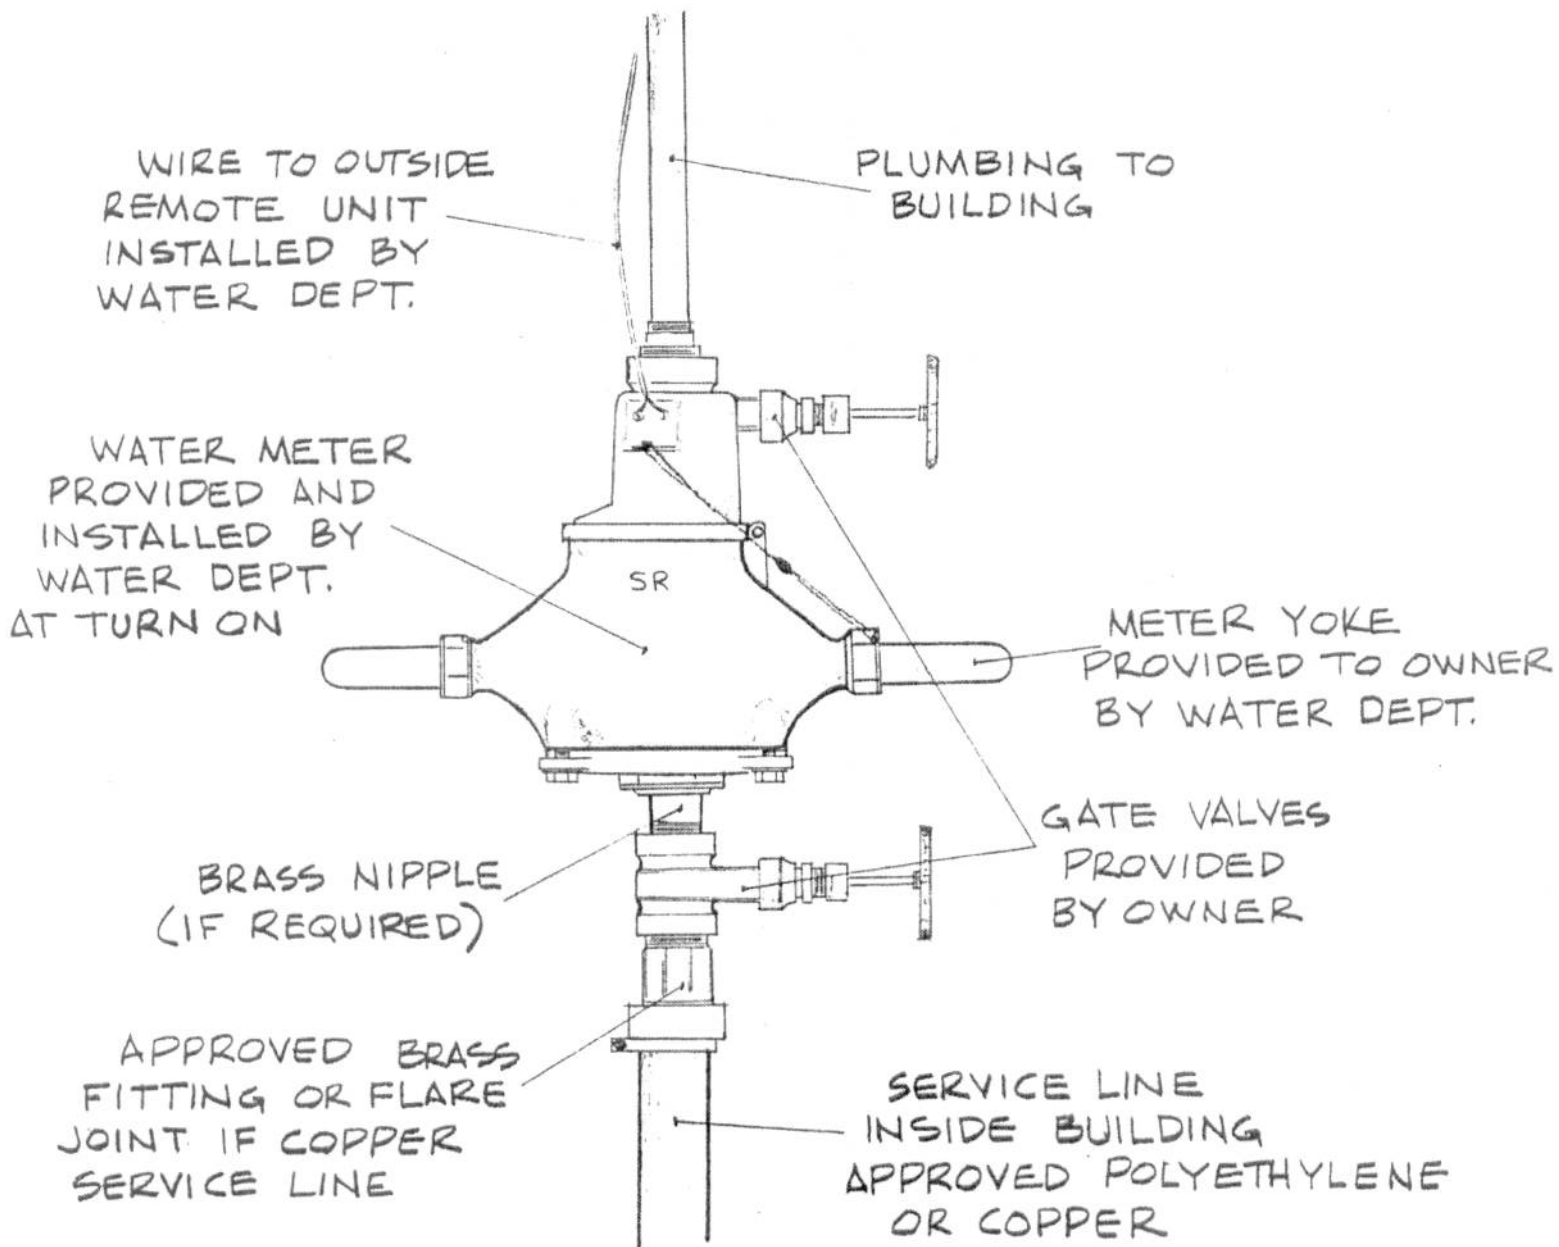

- \* YOKE ASSEMBLY SHOULD BE STABILIZED IN A FASHION TO SUPPORT WEIGHT OF METER AND AVOID VIBRATION ASSOCIATED WITH WATER SURGES.